

SPEED CHARGER



Product NO.: DR-3004

Packaging: Box

Color: Black

**For use with
P.S.3®**



- Charge 2 controllers (not included) at the same time
- AC Adapter (230V) included
- Recharge in 1 hour
- LED indicators
- Keep away from water, humidity, dust and dirt
- Manual Included

- Permet de recharger 2 manettes (non compris) en même temps
- Chargeur (230V) inclus
- Chargeur en 1 heure
- Témoins lumineux-LED
- Garder le produit éloigné de l'eau, de l'humidité de la poussière et de la saleté
- Manuel Anglais inclus

- Gelijktijdig opladen van 2 controllers (niet meegeleverd)
- AC Adapter (230V) meegeleverd
- Opladen in 1 uur
- LED indicatoren
- Voorkom contact met vocht, stof en vuil
- Engelse handleiding ingesloten



PRODUCT FEATURES

SPEED CHARGER & AC ADAPTER

- Charge 2 controllers simultaneously
- High speed recharge in 1 hour
- Charge from any wall outlet
- Design matches the console
- LED indicators



* CONTROLLERS NOT INCLUDED

PACKAGE INFORMATION:

Product description	EAN-Code	Category	Quantity & Size: LxWxH (mm)			Weight(kg) PCS / KG
DR-3004 SPEED CHARGER	8716392003865	P.S.3®	Single	1 PCS	148 X 55 X 153 (mm)	0.453
			Inner	10 PCS	582 X 158 X 192 (mm)	4.73
			Master	20 PCS	598 X 334 X 212 (mm)	10.08

For use with
P.S.3®



DR-3004 Charging Dock User Manual

The Charging Dock provides a convenient way to charge your controllers without leaving your console switched on.

Important - Keep the Charging Dock and AC Adaptor away from moisture, liquids, dust and dirt.

Set Up

1. Connect the AC Adaptor into the Charging Dock.
2. Plug the AC Adaptor into a wall outlet.
3. Place your controllers into the slots, they will only fit one way around, **do not force them in.**
4. RED glowing LED colour lets you know that your controllers are charging.
5. When the LED colour turns GREEN your controllers are fully charged and ready for use.

For support and questions please contact us using the following e-mail address: support@draxter.net

This product is not approved, sponsored or endorsed by Sony Computer Entertainment®.
Sony , P.S.3® are registered trademarks of Sony Computer Entertainment®.
Draxter® is a registered trademark of Draxter B.V.
Copyright 2009 Draxter BV